

**Installation Instructions**

**NABIC**  
**THREE-WAY ESCAPE VALVE FIG 503 / 175**

1. The connection marked "Boiler" must be fitted directly to the boiler or calorifier with no intervening stop valve.
2. The connection marked "Vent" or "To Flow" should be fitted with a vent pipe or connected to the vented flow pipe. There must be no stop valve fitted between the valve and the open end of the vent pipe.
3. The connection marked "Drain" or "To Waste" should be fitted with a short pipe leading to an open drain or tundish.

For Technical Advice

Delta Fluid Products Ltd  
Delta Rd  
St.Helens  
Merseyside. WA9 2ED

Phone: 01744 611811  
Fax: 01744

1413/1